



5750 DONAHUE STREET, MONTREAL, QUEBEC. H4S 1C1

TEL.: 514-336-3820, 800-390-0140 FAX: 514-745-1764

www.airtekltd.com E-MAIL info@airtekltd.com

B3000

No :	Part No:	Description
1	3060100	Crankcase
2	3030000	Cylinder
3	3060400	Head
4	3560200	Crankshaft
5	3060300	Crankcase Base Plate
6	2640050	Valve Plate Assembly
7	3510100	Connecting Rod
8	1421100	Piston
9	3021200	Wrist Pin
10	9140040	Circlip
11	9020011	Compression Ring
12	9020041	Step Ring
13	9020071	Oil Ring
14	9014006	Splash Pin
15	2281000	Intake Filter
16	2270101	Discharge Elbow
17	2060690	Bearing Housing Cover (NDS)
18	2060590	Bearing Housing Cover (DS)
19	9038070	Wrist Pin Spacer
20	2600100	Flywheel

No :	Part No :	Description
21	9170010	Main Bearing
22	9022001	Oil Sight Glass
23	9024003	Oil Fill Plug
24	9163010	Oil Seal
25	9110012	Flywheel Bolt
26	9004008	Flywheel Washer
27	3050101	Crankcase Base Plate Gasket
28	3050200	Crankcase Gasket
29	3050300	Cylinder Gasket
30	2640300	Valve Plate Gasket
31	3050400	Head Gasket
32	2050500	Bearing Housing Gasket
33	2070200	Discharge Elbow Gasket
34	9101594	Head Bolt
35	9101144	Bearing Housing Bolt
36	9101314	Inlet Filter Bolt
37	9101254	Discharge Elbow Bolt
38	9107254	Cylinder Bolt
39	9103104	Base Plate Bolt
40	9101154	Oil Drain Bolt
41	9162010	Oil Drain Gasket

B3000

