



5750 DONAHUE STREET, MONTREAL, QUEBEC. H4S 1C1
 TEL.: 514-336-3820, 800-390-0140 FAX: 514-745-1764
 www.airtekltd.com E-MAIL info@airtekltd.com

B3800 / B3801

No :	Part No:	Description
1	3660100	Crankcase
2	3630000	Cylinder
3	2860401	Head
4	3660200	Crankshaft
5	3660160	Crankcase Bottom
6	2840050	Valve Assembly
7	1021100	Piston
8	3610100	Connecting Rod
9	9140040	Circlip
10	9020011	Step Ring
11	9020041	Compression Ring
12	9020071	Oil Ring
13	2281000	Filter Assembly
14	2070103	Aftercooler (B3801)
15	2270101	Discharge Elbow (B3800)
16	2060690	Main Bearing Housing (NDS)
17	2060590	Main Bearing Housing (DS)
18	9170030	Main Bearing (6205)
19	9024003	Oil Fill Plug

No :	Part No:	Description
20	9163010	Oil Seal
21	9110014	Flywheel Bolt
22	9004008	Flywheel Washer
23	3650100	Crankcase Bottom Gasket
24	3650201	Frame Gasket
25	2850300	Cylinder Gasket
26	2850400	Head Gasket
27	2050500	Bearing Housing Gasket
28	3970200	Aftercooler/Discharge Elbow Gasket
29	9101594	Head Bolt
30	9101314	Filter Assembly Bolt
31	9101254	Aftercooler Bolt
32	9101094	Bearing Housing Bolt
33	9107254	Cylinder Bolt
34	9119273	Crankcase Bottom Bolt
35	9101154	Oil Drain Plug
36	1000306	Oil Sight Glass
37	2000181	Flywheel
38	3021200	Wrist Pin

B3800 / B3801

