





吉生 GISON

GP-101A Air Hydraulic Riveter

ADDING OIL METHOD (一) (二)

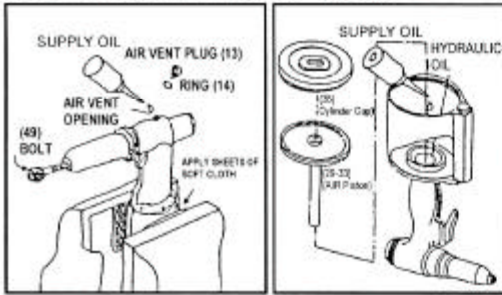

ADJUSTING LENGTH

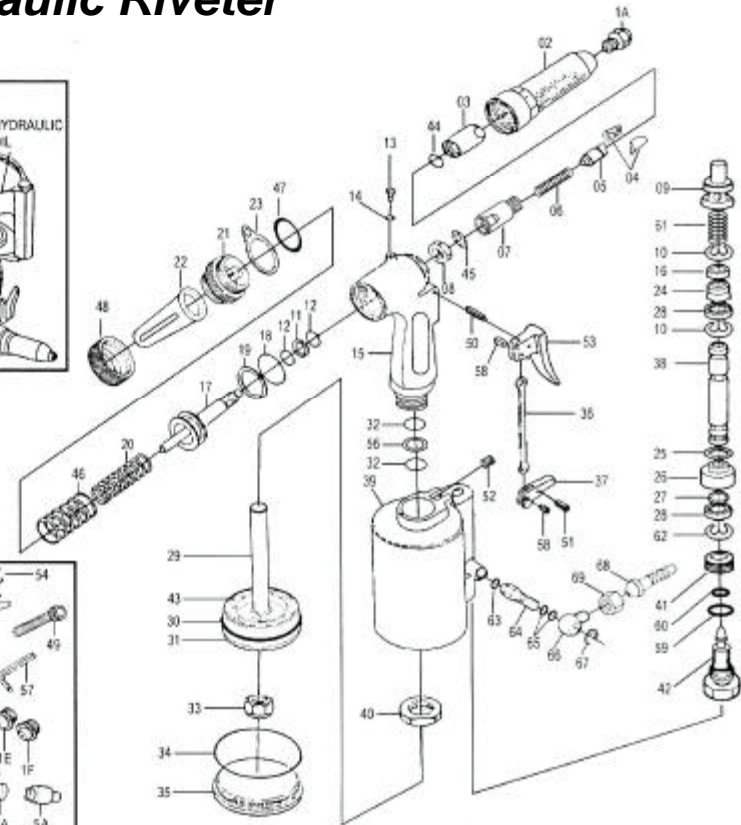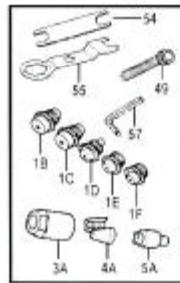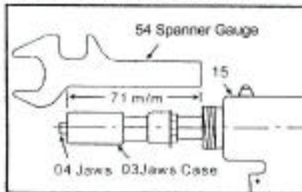

PARTS LIST

✳ : Optional Accessories

Item No.	Part No.	Description	Qty.	Item No.	Part No.	Description	Qty.
1A	101H01A	Nosepiece 6.4 mm (1/4")	1	30	101H30	O-Ring	1
1B	101H01B	Nosepiece 6.0 mm (7/32")	1	31	101H31	Air Piston	1
1C	101H01C	Nosepiece 4.8 mm (3/16")	1	32	101H32	O-Ring	2
1D	101H01D	Nosepiece 4.0 mm (5/32")	1	33	101H33	Lock Nut	1
1E	101H01E	Nosepiece 3.2 mm (1/8")	1	34	101H34	O-Ring	1
1F	101H01F	Nosepiece 2.4 mm (3/32")	1	35	101H35	Cylinder Cap	1
02	101H02	Nose Housing (93L)	1	36	101H36	Trigger Rod	1
✳ 02L	101H02L	Long Nose Housing (202L)	1	37	101H37	Trigger Lever	1
03	101H03	Jaws Case (3/16"~1/4")	1	38	101H38	Valve Tube	1
03A	101H03A	Jaws Case (3/32"~5/32")	1	39	101H39	Air Cylinder	1
04	101H04	Jaws (6 × 12) (3/16"~1/4")	2	40	101H40	Frame Lock Nut	1
04A	101H04A	Jaws (5 × 10) (3/32"~5/32")	2	41	101H41	Nipple Screw	1
05	101H05	Jaw Pusher (3/16"~1/4")	1	42	101H42	End Plug	1
05A	101H05A	Jaw Pusher (3/32"~5/32")	1	43	101H43	Rubber Cushion	1
06	101H06	Jaw Case Spring	1	44	101H44	Jaw Case O-Ring	1
07	101H07	Jaw Case Back Part	1	45	101H45	Washer Ring	1
✳ 07L	101H07L	Long Jaw Case Back Part	1	46	101H46	Return Spring (Big)	1
08	101H08	Jaw Case Lock Nut	1	47	101H47	Frame Cap Ring	1
09	101H09	Valve Pusher	1	48	101H48	Safety Cap Nut	1
10	101H10	E-Ring	2	49	101H49	Bolt Plug	1
11	101H11	Back Up Ring	1	50	101H50	Pin	2
12	101H12	O-Ring	2	52	101H52	Lock Screw	1
13	101H13	Air Blow Plug	1	53	101H53	Trigger (Long)	1
14	101H14	Packing Seal	1	✳ 53A	101H53A	Trigger (Short)	1
15	101H15	Frame	1	54	101H54	Spanner Gauge	1
16	101H16	Collar For Valve Tube	1	55	101H55	Spanner	1
17	101H17	Oil Piston	1	56	101H56	Back-Up Ring	1
18	101H18	O-Ring	1	57	101H57	Hex. Wrench	1
19	101H19	Back Up Ring	1	58	101H58	Trigger Pin	2
20	101H20	Return Spring (Small)	1	59	101H59	O-Ring	1
21	101H21	Frame Cap	1	60	101H60	Seal	1
22	101H22	Safety Cap	1	61	101H61	Pusher Spring	1
23	101H23	Hanger Clip	1	62	101H62	E-Ring	1
24	101H24	Air Valve Seal	1	✳ 63-67	101H63-67	Universal Joint	1
25	101H25	O-Ring	1	✳ 68	101H68	Air Hose Joint (5/16")	1
26	101H26	Valve Seat	1	✳ 69	101H69	Air Hose Joint Nut (1/4")	1
27	101H27	O-Ring	1	✳ 70	101H70	Outer Thread Joint (PM20)	1
28	101H28	Valve Collar Washer	2	✳ 70	101H71	Inner Thread Joint (PF20)	1
29	101H29	Air Piston Rod	1				